

### Installation Instructions:

1. Remove old lever. (The next instruction is critical)
2. Install new lever. (It's just one bolt).
3. Make sure piston rod is seated in the small recess.
4. Use some lube on the pivot if you want to, it helps.
5. Reapply Loctite on the lever adjustment set screw as necessary.
6. Adjust the reach as desired.

**CLEVER LEVERS**

**MIDWEST MOUNTAIN ENGINEERING**  
**midwestme.com**