

# TF 229 XC Saw Mount

## Installation Instructions:


1. Remove headlight/ front number plate. Use Velcro cable wrap to secure loose wires.
2. Remove one fastener from the odometer (as shown in picture). Replace with provided standoff fastener and tighten.
3. Remove front fender fasteners. Replace two front fasteners with provided 20 millimeter length fasteners. Do not thread it in all the way (as shown in picture) leave space out about ¼ of an inch to allow for saw mount.
4. Saw mount can now be put in position. First fasten upper saw mount using odometer fastener that was removed earlier and tighten to upper triple clamp. Now tighten front fender fasteners to secure lower saw mount to bottom triple clamp.

Your bike is now ready to carry your chain saw. The saw should fit securely. If not, there are adjustment features on the Mount to hold your saw secure. The cut-out slot on the front of the mount will carry a chainsaw file. A small piece of rubber hose would help to secure the file.


Note all fasteners on the Mount are held in place with medium strength lock tight.





**Tools you will need:**  
10 mm wrench  
¼" ratchet w/ extension  
8 mm socket  
T-handle w/ 8 mm socket  
6 mm socket

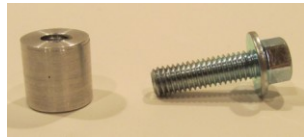

This half-inch spacer and 20mm bolt are included for use on bikes that do not have an odometer.

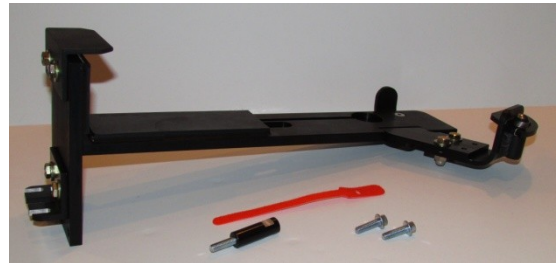

**Chainsaw Mount & parts included:**  
Velcro cable wrap  
Two 6 mm x 20 mm mini flange bolts  
One stand-off adaptor

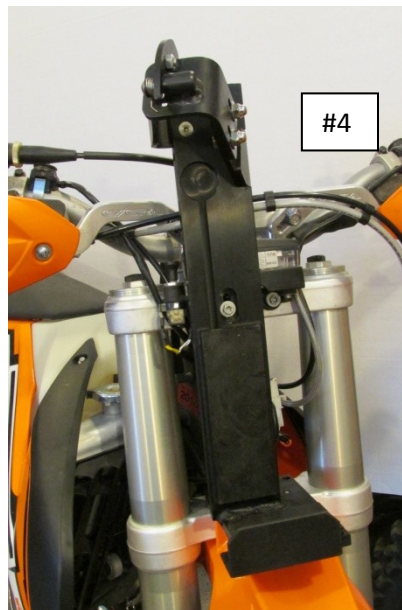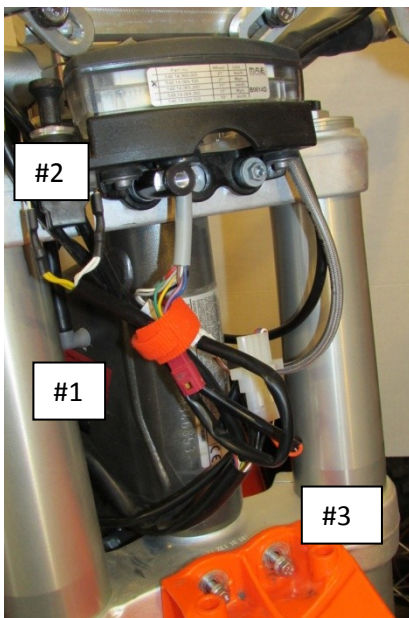

Jerry Lund  
612.802.6469  
trailfast@gmail.com  
midwestme.com



\*Pictured above is a 2014 300XC-W with a Stihl 180 chainsaw