

TF229M Saw Mount


Installation Instructions:

1. Remove headlight/front number plate. Use Velcro wire wrap to secure loose wires.
2. Remove one fastener from the odometer (as shown in picture below). Replace with provided standoff fastener and tighten.
3. Place the black rubber cushions on the fork tubes (as seen in picture on bottom right). Now with the 20-mm fastener, attach saw mount to standoff. Next attach hose clamps to the bottom crossbar and around forks.


Note: Use orange Velcro wire wrap to support any loose wiring after headlight is removed. If your bike does not have an odometer, the half-inch spacer can be used along with the standoff.

Your bike is now ready to carry your chainsaw. The saw should fit securely. If not, there are adjustment features on the mount to hold your saw secure. The cut-out slot on the front of the mount will carry a chainsaw file. A small piece of rubber hose would help to secure the file.

Note that all fasteners on the mount are held in place with medium strength lock tight.

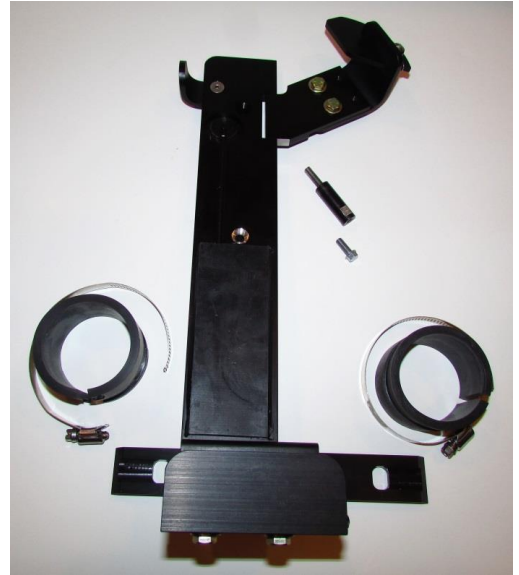

Velcro wire wrap
& half-inch spacer

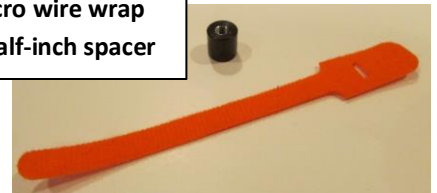

The picture above shows
standoff located at odometer,
and the Velcro wire wrap.

Jerry Lund
612.802.6469
trailfast@gmail.com
midwestme.com



Black rubber cushions

Pictured above is a 2014 300XC-W
with the TF229M Chainsaw Mount